

### Harvard and T6 parts in stock

All items are new military surplus unless otherwise stated

Prices on request. Applicability is guide only.

Part No	Description	Applicable	Qty	Condition	Box
700	Outer bearing set tail wheel (Timken)	4 & 6G	3		1
8125	Tail gear post upper bearing	4 & 6	2		2
8231	Cup, for 08125 bearing tail wheel knuckle	4 & 6	1		2
18200	Main wheel bearing, inner	All	2		2
19150	Inner tail wheel bearing/tail lower post bearing	4 & 6	1		2
50430	see 07-33172				
52483	Capacitor (CA275X)	All	1		3
1933449	Brake pedal return spring	All	17		2
8840273	Duct assembly mixing chamber to carb upper air	6	2		9B
8840274	Duct assembly mixing chamber to carb lower air	6	2		9B
07-33172	Retainer axle bearing	All	2		1
07-53325	Steel flex coupling hot air	2 & 4	1		1
07-53372	Flex coupling clamps	2 & 4	2		1
1042-17A	Regulator - carbon pile voltage (P-1)	6G & 4			4
121-21027	Rudder hinge	6	3		1
14-31077-10	see 66-31077	2 & 4			
1600CAC	Drain valve	All	9		2
168-31222	Rear step bracket	All	2		2
168-31849	Pilot canopy release plate	All	4		2
168-33558	Bushing - gear emergency down lock cable	6G	4		4
168-33558	Bushes downlock cable	4 & 6G	10		2
168-33560	Emergency downlock cable	4 & 6G	4		2
168-48008	Fuel auxiliary tank outlet	4 & 6G	2		2
168-51017-1	Support assembly panel lower LH	6	1		2
168-51081-7	Thermo couple lead firewall to engine	All	1		A
168-51081-7	Thermo couple lead firewall to engine	All	1	Used	A
168-53010-20	Seat bungee assembly	All	4		1
19-43008	see 49-43008				
19-48013	Fuel filler - neck washer	All	2		4
19-51006	see 88-51006				
19-52312	Bracket aileron control pulley centre section	2 & 4	1		2
19-52312	Bracket aileron pulley	4 & 6	1		2
19-52440	Gear indicator spring	4 & 6	7		2
19-52440	Rudder pedal tube spring	All	7		2
19-52507	Bushing trim tab drum	All	1		2
19-52638	Bracket - flap push/pull rod	6	16	2 Used	4
19-53037	Fire ext door button spring	All	3		4
2-2140-24	Valve assembly hydraulic one way	All	1		3
25-1805	Front canopy handle spring	All	1		4
28-43006	Throttle mixture propeller bellcrank support	All	2		2
28-43014	Bellcrank engine throttle control lower	All	2		2
2W1-122-89-44	Washer, tail wheel post	4 & 6G	2		2
310-1003530	Cone, roller taper bearing, wheel main	All	2		1
34A-2	see 07-33172				
36-31221	Pilot foot step bracket	All	2		1
36-33542	Bolt landing gear lock mechanism	All	1		2
36-33551	Bracket RH gear position indicator pulley	All	2		2
36-33556	Boot landing gear lock mech bellcrank housing	All	4		2
36-43011	Bellcrank assembly engine mixture control upper	All	2		2
36-43016	Bellcrank carb mixture control upper	All	4		2
36-43017	Bracket carb air upper bellcrank	All	4		2
36-44007	Prop control front bellcrank support	All	2		2
36-52611	Bracket - flap push/pull rod		1	Used	4
43B22466	Fuel, dial & handle assembly	6	3		2
45-31830-12	Channel rear LH side canopy	4	1		2
45-43007	Clamp	4	2		2
45-48032	Fuel select placard (imp gall)	2 & 4	2		2

Part No	Description	Applicable	Qty	Condition	Box
45-48084	Adaptor fuel socket	4	8		2
45-48100-1	see 88-00110				
454-8-24	Spacer	All	3		3
45-51015	Instrument panel swivel rod	4 & 6	2		2
45-51020	see 77-51020				
45-54100	Front electric console support clamp	4	2		2
45-54204	Landing light retaining clamp	2 & 4	1		A
45-71004	Clamp assembly VHF antenna	4	1	Used	9B
48-31076	Cowling assembly firewall to windshield LH	2	1		10B
48-31076-1	Cowling assembly firewall to windshield RH	2	1		10B
49-31805	see 168-31849				
49-31808	Pivot cockpit release handle	2, 4 & 6	2		2
49-31816	Cockpit release handle	All	2		4
49-31847	Pilot canopy lock plate	All	4		2
49-43008	Engine mixture control bellcrank support	4	2		2
49-43012	Bellcrank engine mixture control lower	All	2		2
49-48025	Bracket hand fuel pump	All	2		1
49-48055	see 88-48055				
4B14R5-37	Spacer, bolt gear latch to support	All	& 6G		1
4B5R35	Bushes, landing gear	All	2		1
50-58055	Power control spring g/flap selective valve	All	5		2
52-21007	Tee-horizontal stab outer hinge bracket attaching	2 & 4	1		2
52-21008	Tee horizontal stab outer hinge support	2 & 4	1		2
52-31107	Fitting fuselage/horizontal stab rear attach RH	All	1		2
52-31107-1	Fitting fuselage/horizontal stab rear attach LH	All	1		2
52-31169	Fitting tail wheel attachment	All	4		2
52-31248	Step seal	All	3		4
54-14030	see 66-14043				
55-13210	Flap mounting bracket	2 & 4	5		4
55-14065	Bracket LH wing for outer aileron hinge	2 & 4	2		3
55-14065-1	Bracket RH wing for outer aileron hinge	2 & 4	1		3
55-14066	Aileron hinge LH wing inner bracket	2 & 4	2		2
55-14066-1	Aileron hinge RH wing inner bracket	2 & 4	2		2
55-14069	Aileron hinge LH wing	2 & 4	1		2
55-16080-2	Bracket assembly aileron hinge LH inboard	6	3		2
55-18006	Bushing wing flap (rod)	2 & 4		Used	4
55-20002	Fillet assembly, horizontal stab left front	All	2		9B
55-20005	Fillet assembly, horizontal stab left rear	All	1		11B
55-20008	Fillet assembly, horizontal stab right rear	All	1		11B
55-31049	Fire ext door spring	All	5		3
55-31143-3	Block, fuselage/vertical stab spar support RH	All	1		2
55-31222	see 168-31222				
55-31863	Frame windshield support	2 & 4	3		2
55-33548	Arm, landing gear lock pin support link	All	2		2
55-33563	R & L gear lock pin support link left hand	All	2		2
55-33563-1	R & L gear lock pin support link right hand	All	2		2
55-43013	Bellcrank engine throttle control upper	All	3		2
55-44008	Bellcrank assembly prop control centre	All	2		2
55-44011	Bellcrank assembly prop control rear	All	2		2
55-52428	Brake pedal rods	All	7		1
55-52503	Bracket elevator trim tab pulley rear	All	5		2
55-52504	Bracket, elevator trim tabs pulley, rear RH	All	5		2
55-52634	Flap rollers	All	19		4
55-52634	Roller, flap control tube guide upper (aluminium)	All	4		3
55-52649	Turnbuckle Assembly Flap rod push/pull	2 & 4	6		4
55-53306-2	Fitting firewall hot air vent	6	5		1
55-54177	Control rod to horn warning switch	All	1		2
55-58143	Spring hydraulic control unit relief valve outer	4	3		3
55-58144	Spring control - unit relief valve inner		2		4
57-43033	Boot engine control rod	All	4		2
58-13306	Flap stops, rubber	All	50		2

Part No	Description	Applicable	Qty	Condition	Box
58-53045	Rear seat frame lower cross strut brackets	4	6		4
5B-14-2	see 121-21027				
5B-14-3	Elevator hinge	6	21		1
66-14043	Angle - outer lh wing lower rear bolting	2 & 4	1		
66-16001-1	see 84-16001-1				
66-31077	Baggage lock assembly	6	5		2
66-33109	Pin landing gear retract mechanism	All	2		2
66-52527	Cable and drum assembly - elevator trim	All	3		A
66-53046	Pilot seat shock cord attach tube	4	1		1
66-53314	Flex tube cold air vent	All	1		1
77-43010	Fair lead assembly engine controls	All	1		2
77-51020	Vacuum manifold	All	5		1
84-16001-1	Aileron assembly RH	6	1		
88-00110	Fitting fuel selector valve outlet	All	2		2
88-21018	Elevator inner hinge support	6	1		2
88-21019	Elevator outer hinge support	6	2		2
88-21044	Elevator inboard hinge support	6	2		2
88-34023	Washer, tail wheel post bearing retainer	4 & 6G	1		2
88-34025	Nut, tail wheel knuckle	4 & 6G	1		2
88-34027	Washer, tail wheel post spring retainer	4 & 6G	1		2
88-34028	Tailpacking post	6G & 4	2		4
88-34028	Packing, tail wheel post	4 & 6G	1		2
88-34029	Ring, tail wheel post packing retainer snap	4 & 6G	1		2
88-34034	Nut, tail wheel axle	4 & 6G	3		2
88-34036	Cap tail wheel post support sleeve	6	2		2
88-34037	Spring tail wheel post	4 & 6	4		2
88-34157	Roller tail wheel steering control	All	4		2
88-34176	Tail wheel steering arm	4 & 6G	2		2
88-34631	Washer, tail wheel bearing retainer	4 & 6G	4		2
88-48055	Hand fuel pump rod assembly	All	3		1
88-51006	Gasket rubber, fuel gauge glass	All	4		2
8C5	Floats, fuel system modification	All	6		1
A2334A	Rheostat lighting	All	2		4
AC42A3589	Fuel cap	4	6		2
AN104B	Mast VHF antenna	4	1	Used	9B
AN155-65	Turnbuckle	All	6		2
AN161-16RS	Fork ends clevis	All	5		2
AN200KS4	Bearing spherical	All	1		4
AN210-3	Pulley wheel assembly	All	11		2
AN210-4B	Pulleys	All	7		2
AN210-5A	Pulley assembly, controls	All	1		2
AN3021-3	Switch	All	1		3
AN3021-3	Switch	All	1		A
AN3022-10	Throttle switch, gear warning	All	1		A
AN3022-2	Switch	All	1		4
AN3022-2	Switch	All	3		A
AN3022-8B	Switch - gear warning horn	All	1		4
AN3157-317	Warning lamp assembly - red	All	7		A
AN3157-412	Warning lamp assembly - green	All	7		A
AN3160-15L	Switch - landing light	All	1		4
AN3160-15L	Switch	All	1		A
AN3161-P10	Circuit breaker	All	3		4
AN3161-P5	Circuit breaker	All	2	Used	3
AN360-102	Switch/circuit breaker	All	1		4
AN386-2-9	Taper pin tail wheel declutch head assembly	4 & 6G	6		2
AN486-1	Clevis rod end (engine controls)	6	20		2
AN490-6	Rod end threaded fork engine controls	2 & 4	7		2
AN5525-1	Bulb electrical resistance carb air temp	All	10		A
AN5540-2	Thermo couple	All	1	Used	A
AN5829-2	Vacuum reducer valve	All	1		2
AN6241-10	Hydraulic self sealing coupling assembly	All	2		2

Part No	Description	Applicable	Qty	Condition	Box
AN6241-6	Hydraulic self sealing coupling assembly	All	2		2
AN6290-4	O ring Boss fitting oil pressure gauge	All	3		1
AN6291-4	O ring Boss fitting oil pressure gauge	All	3		1
AN8008D12	Vibration insulator (panel)	6	1		2
AN8008D15	Vibration insulator (panel)	6	1		2
AN8008D8	Vibration insulator (panel)	6	3		2
AN924-10	Bulkhead fitting nut	6G	3		2
B1079/5C1	Clamp	All	4		2
B1084-20	Clamp	All	2		2
B1086	U bolt, special 1/4 inch	All	6		1
B1176-3	Canopy corner supports	2	5		2
B1224	Hinge bearing assembly	2 & 4	1		2
CA275X	see 52483				
CA275X	Capacitor	All	1		A
F31-14	see REB3-1				
K4	Bearings	All	14		4
K5	Bearings	All	10		4
NAS2-5506	Flapper valve - fuel	All	6		4
P-1 (Type)	see 1042-17A				
PLA-70	Contact breaker, generator 24v	4 & 6	1		A
REB3-1	Rod ends	All	11		2
	External power male converter	All	1		4
	Bush undercarriage door leg bracket	All	2		4
	Prop governor gasket	All	15		4
	Spacers elev/rudder hinges	All	24		2
	Clips main wheel cover	All	40		2
	Engine control boots	All	12		2
	Warning light green ptt	All	4		3
	Elcon connector		1		3